

Fuser

WARNING!

The fuser is very hot. After turning the printer power off, allow the fuser to cool for at least 30 minutes before removing it.

1. Remove the rear output bin. See ["Rear output bin" on page 155](#).
2. Squeeze the blue fuser release tabs (callout 1).

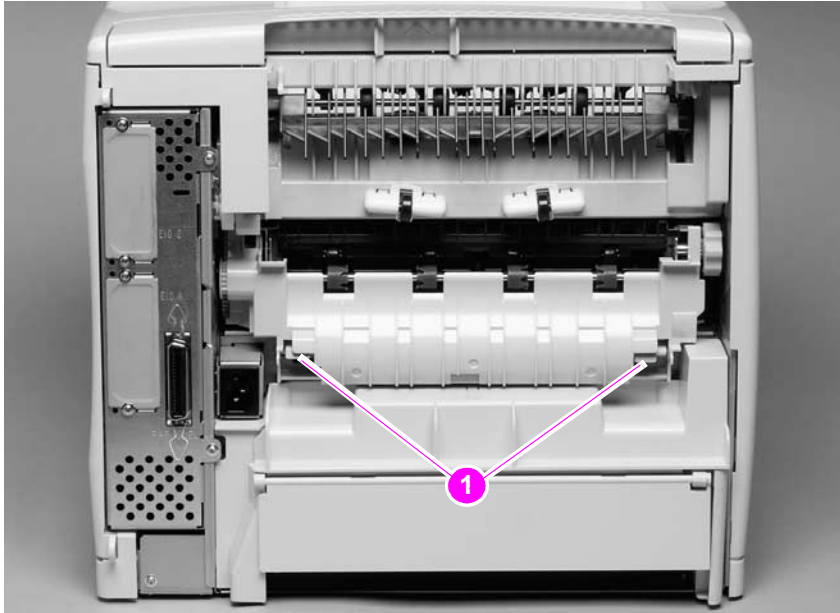


Figure 100.

Fuser (1 of 2)

3. Pull the fuser straight back and out of the printer.

CAUTION

Do not drop or jar the fuser. It can easily be damaged if it is mishandled.

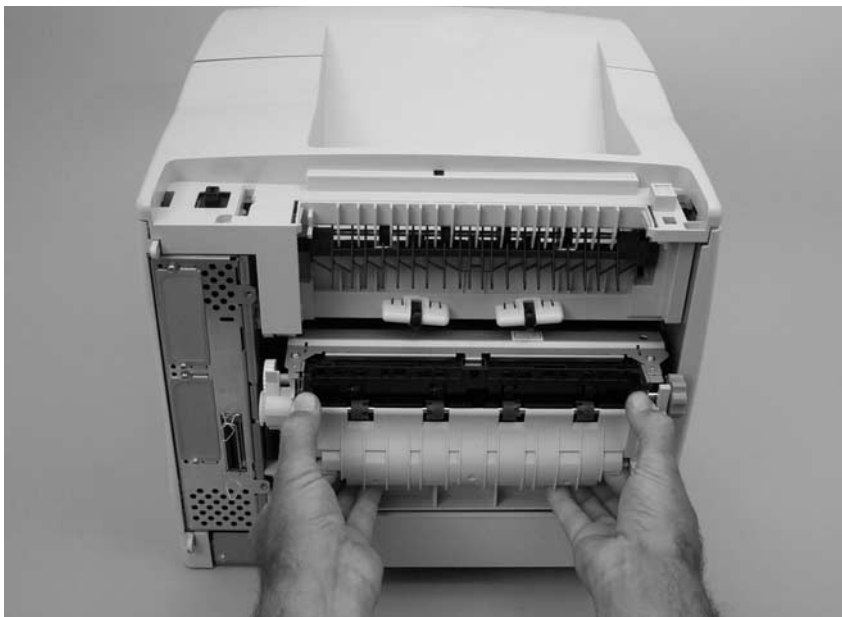


Figure 101.

Fuser (2 of 2)

Hint

When you replace the fuser, make sure that it is fully seated into the printer. You should hear both sides snap into place.

Tray 1 Pickup Roller

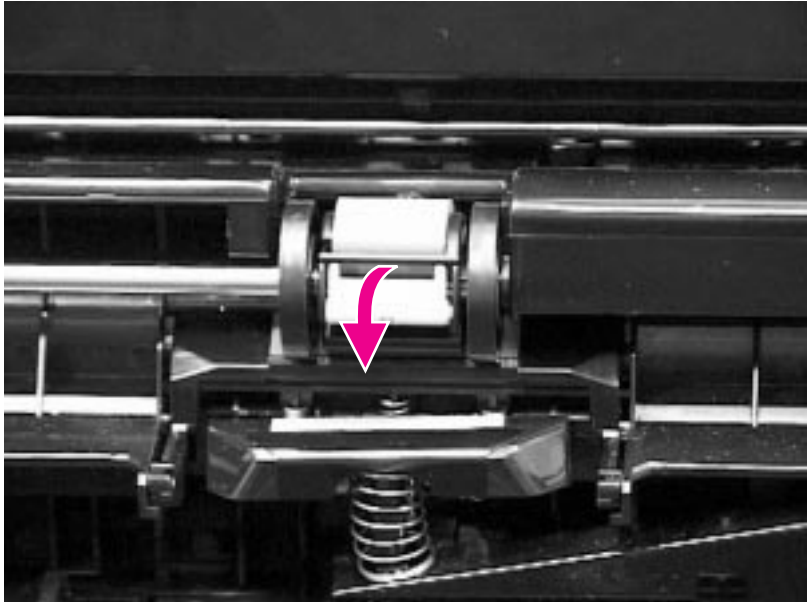


Figure 6-24

Removing the Pickup Roller (shown with Envelope Entrance Cover removed)

- 1 Open Tray 1. The Tray 1 Pickup Roller is in the center of the Tray 1 Pickup Assembly.
- 2 Grasp the Envelope Entrance Cover and pull it straight away from the printer.
- 3 Pry open the blue latch on the roller.
- 4 Lift the roller out.

Hint

To replace the roller, make sure the pin in the roller lines up with the hole in the shaft.

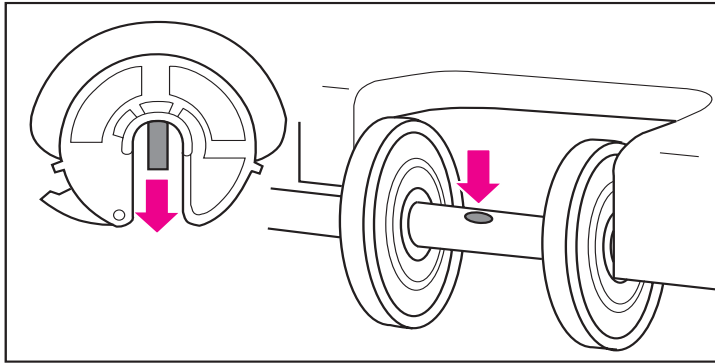


Figure 6-25 Detail of the Tray 1 Pickup Roller

Separation Rollers

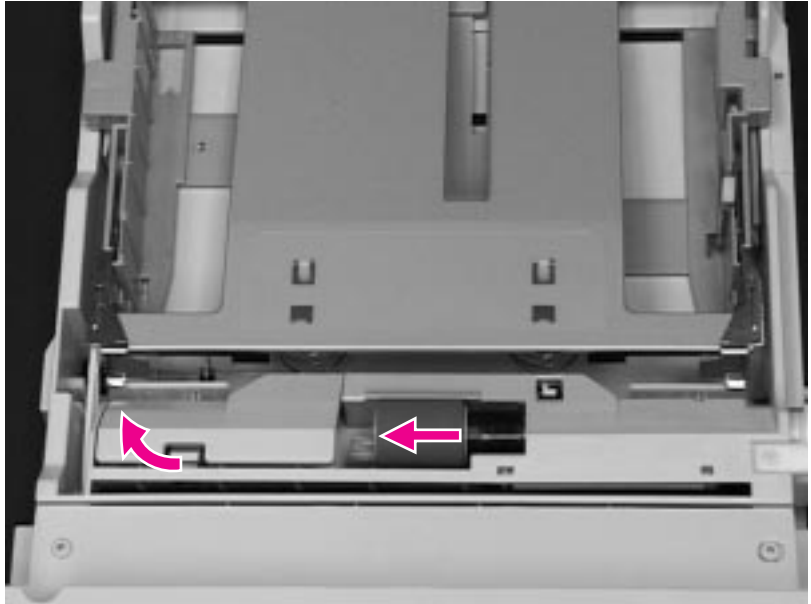


Figure 6-46 Removing the Separation Rollers

The Separation Rollers are inside the paper trays.

- 1 Release the latch and lift the cover inside the tray.
- 2 Pinch the release at the left side of the Roller and slide it off the shaft.

Transfer Roller

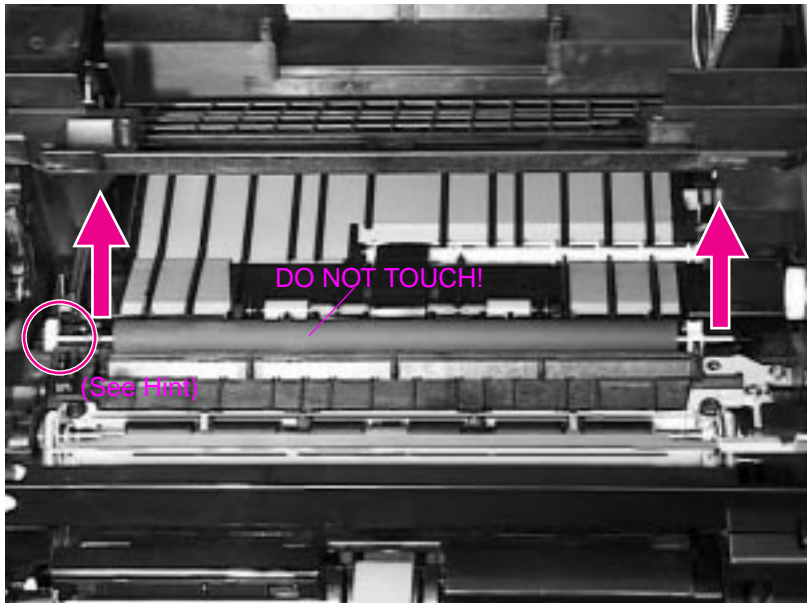


Figure 6-23 Removing the Transfer Roller

- 1 Open the Top Cover and remove the Toner Cartridge. The Transfer Roller is underneath the Toner Cartridge.

CAUTION

Do not touch the black rubber part of the roller. Skin oils on the roller can cause problems with print quality.

- 2 Using a flat-blade screwdriver, pry the right end of the metal shaft out of place, then the left end.

Hint

When you replace the Transfer Roller, make sure the black collar is oriented properly, with the open end down.